


ST-PHC

SYSTEM DESCRIPTION

Closed aluminium horizontal triangular system with fixed tilt

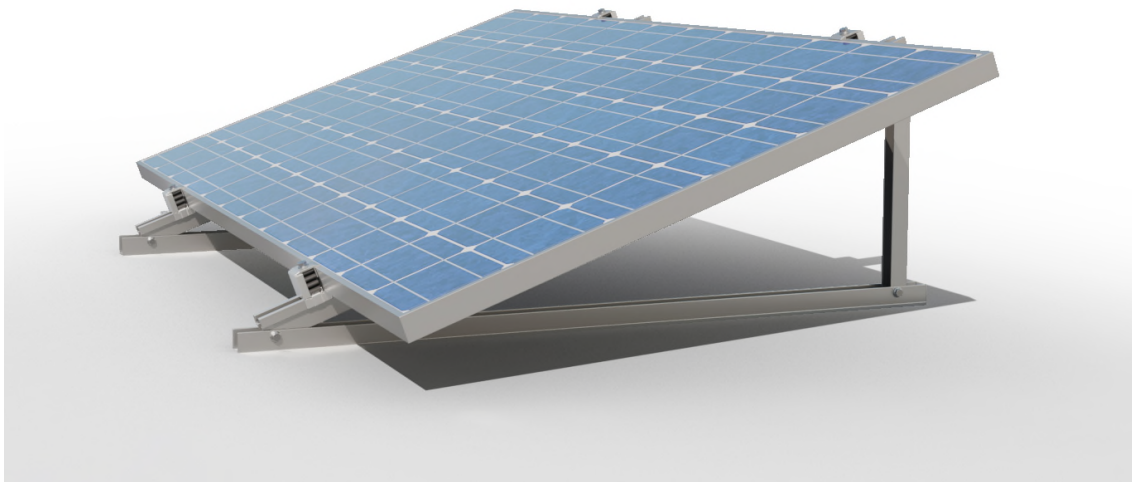



1. CHARACTERISTICS

Description:	Closed triangular mounting system with fixed inclination on tile roof.
System inclination:	Triangular mounting on open, pre-assembled aluminium triangles, consult available angles.
System orientation:	SOUTH, EAST or WEST orientation, according to orientation of roof.
System materials:	Aluminium, Stainless Steel and EPDM.
Guarantee:	Up to 10 years according to environmental conditions (excluding environments exposed to hydrogen sulphide). The guarantee is only valid if the full ST-PTC system is used.
Homologation	CE according to EN 1090-1:2009+A1:2011
Compatible solar panels:	
Panel type:	Solar panels with frame height of between 30mm and 40mm.
Orientation of panels:	Portrait (vertical) mounting orientation of panels
Size of panels:	Module width less than 1150mm
Application area:	
Application area:	Flat and low-slope roofs.
Wind load:	Up to 240 km/h. The structure and fixing should be calculated according to local conditions and the roof itself.
Snow load:	Up to 2 kN/m ² . The structure and fixing should be calculated according to local conditions and the roof itself.



2. COMPONENTS

<p>Quick fastening staple</p> 	<p>Gauge frame</p> 	<p>Closed aluminium triangle</p> 
KFR-SC	GM-A	TPH-C




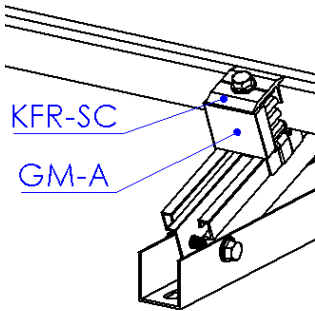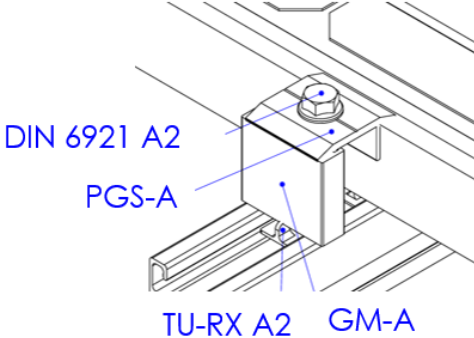



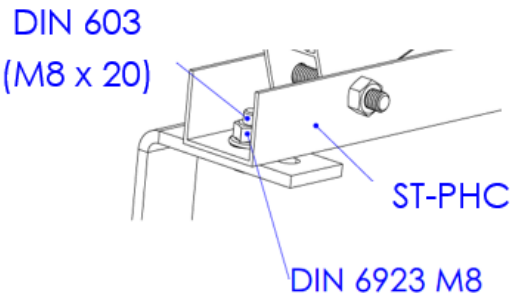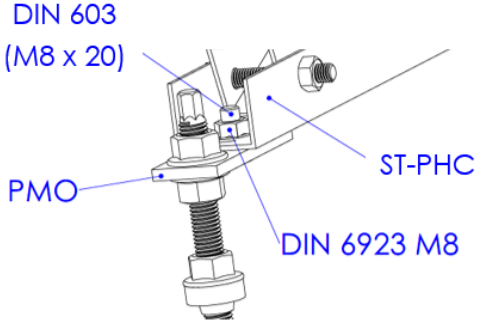





















2.1 Components: Clamps and gauges for mounting plates

Side Staple	
 <p>KFR-SC</p> <p>GM-A</p>	 <p>DIN 6921 A2</p> <p>PGS-A</p> <p>TU-RX A2</p> <p>GM-A</p>
Option 1: Quick Staple	Option 2: Single Staple

2.2 Components: Mounting connectors for fixing accessories.

Bottom connection	
 <p>DIN 603 (M8 x 20)</p> <p>ST-PHC</p> <p>DIN 6923 M8</p>	 <p>DIN 603 (M8 x 20)</p> <p>PMO</p> <p>ST-PHC</p> <p>DIN 6923 M8</p>
Fastening from roof tile guards	Fastening from threaded rod

3. TYPES OF FIXATION

ROOF	SUBSTRUCTURE	FIXING COMPLEMENTS			
 TILE	 CONCRETE	 PMO Mounting plate	 KFS-RV Threaded rod kit for chemical fixing	 Chemical plug	 MO-TM Metal sleeve for chemical plug
	 HOLLOW CONCRETE				 MO-TL Sleeve for chemical plug
	 HOLLOW BRICK				
 TILE	 WOOD	 PMO Mounting plate	 KFS-MA Double threaded screw kit for wood		
 TILE	 WOOD	 GS-TC Roof hook for curved tiles	 GS-TP Roof hook for flat tiles	 DIN-571 A2 A2 stainless steel hexagonal-head screw for wood	
	 CONCRETE			 TP A2 A2 stainless steel chipboard screw with countersunk head	 TN4S Nylon 4-way expansion plug
	 HOLLOW CONCRETE			 EQ-A2 Stud bolts for chemical fixing. Stainless steel A2	 Chemical plug
	 HOLLOW BRICK	 GS-TU Roof hook for universal tiles	 GS-PI Roof hook for slate	 HE + ARVUL Screw mounted with steel-EPDM vulcanised washer	 MO-TN Sleeve for chemical plug

4. APPLICATION EXAMPLES

Example 1: Curved tile roof with masonry substructure / Fixing with GS-TC roof hook




Example 2: Curved tile roof with wood substructure / Fixing with KFS-MA double threaded screw



5. INSTALLATION MANUAL

ST-PHC

Open aluminium horizontal triangular system

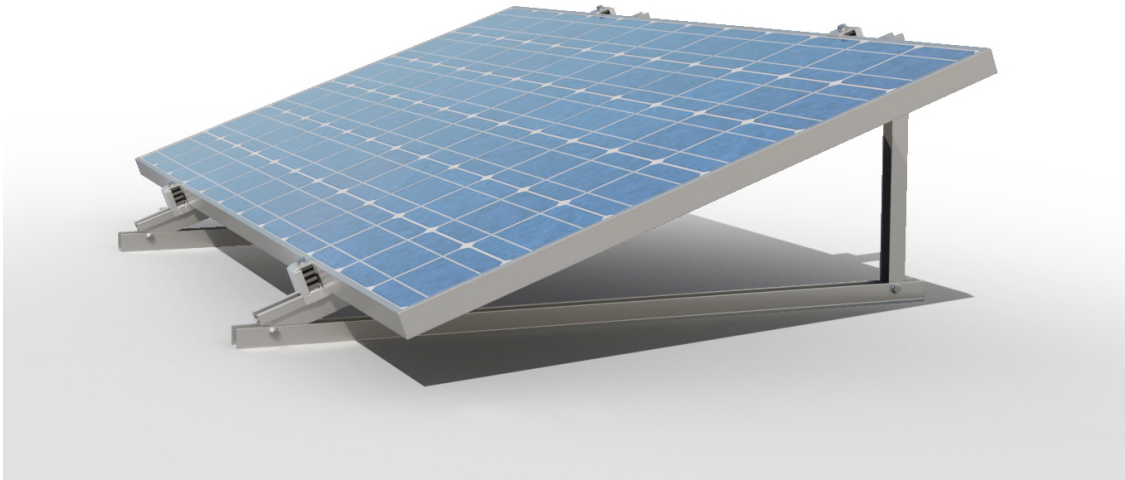

Read these installation instructions before beginning assembly and familiarize yourself with the system components. The assembly should only be carried out by expert and qualified personnel.

Installation Guidelines:


- Make sure that the roof construction is suitable for the introduction of forces at the attachment points and their subsequent transmission. The building must be able to safely accommodate the additional loads.
- A structural calculation must be made based on the local conditions of the installation site.
- The planning of the distribution of the attachment points must be adapted to the needs of the system and the roof.
- To compensate for thermal expansion, include a separation every 12m when planning the photovoltaic system.
- Solar modules must be installed according to the manufacturer's instructions.
- Follow your local building regulations.
- Make sure you work in accordance with the health and safety regulations in force in your region, during installation and in particular during work on deck.
- Do not use the system or the fixings as a ladder.

INSTALLATION PROCESS:

STEP 1.- Consult installation plan


Consult the installation plan on the roof, where the distribution of the modules is defined together with the structures that support them and their fixing points.

- A. Plan view of ST-PHC system with horizontal module orientation (landscape type).

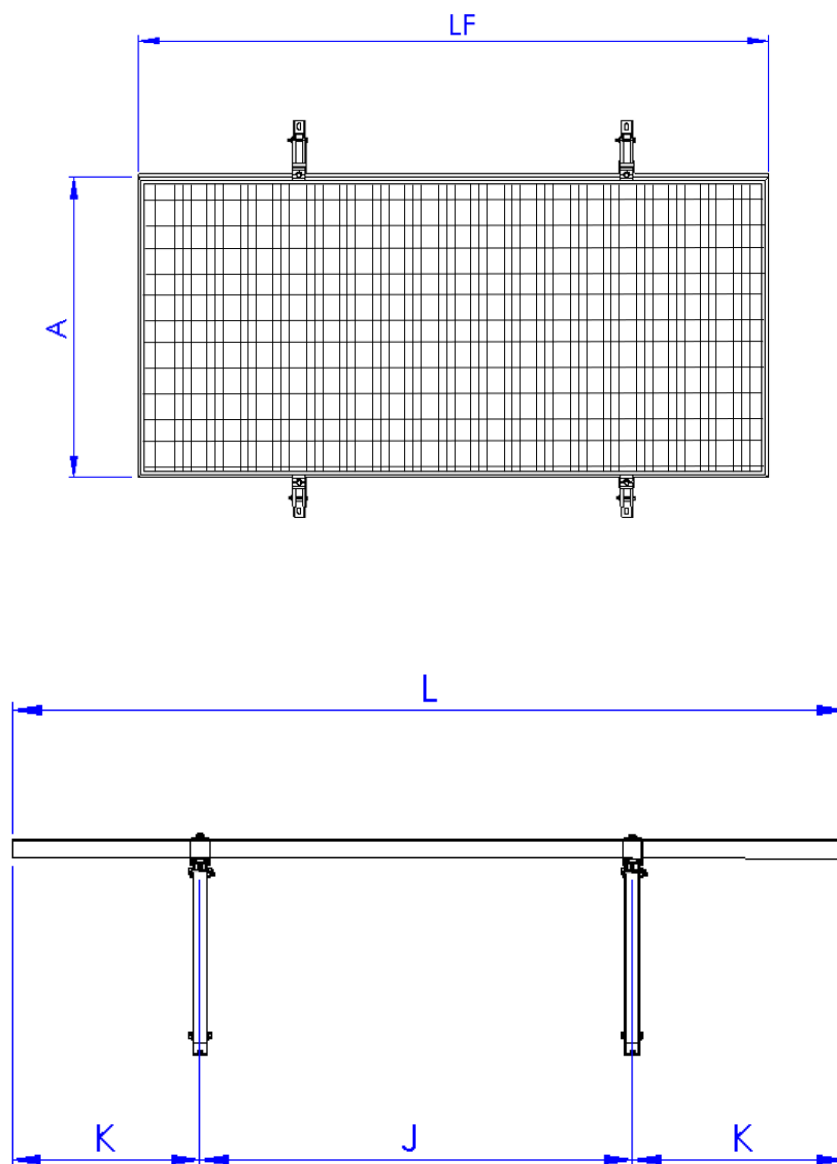

A (mm)	J (mm)	K (mm)
≤ 1150	1400 ÷ 1600	(LF-J) / 2

B. ST-PHC System Profile View

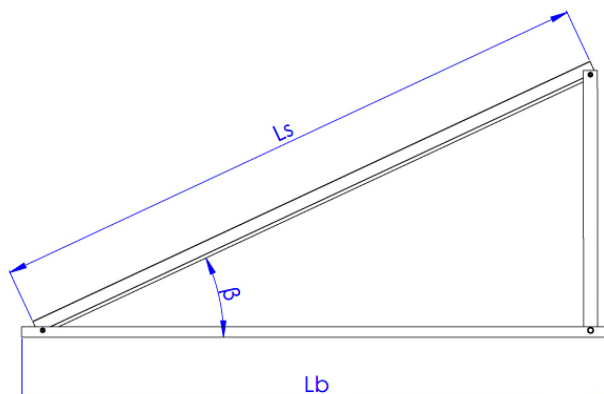


β (°C)	Ls (mm)	Lb (mm)
5	1225	1310
10	1225	1300
15	1225	1277
20	1225	1245
25	1225	1205
30	1225	1155

The type of fastening system and the location of its installation points must be adjusted to the needs of the support structures and in turn to the needs of the roofs where they are to be installed.

STEP 2.- Carry out stakeout on the roof


Carry out a stakeout of the fixing points of each structure on the roof, checking the feasibility of installing each one depending on the chosen fixing system and the characteristics of the roof.

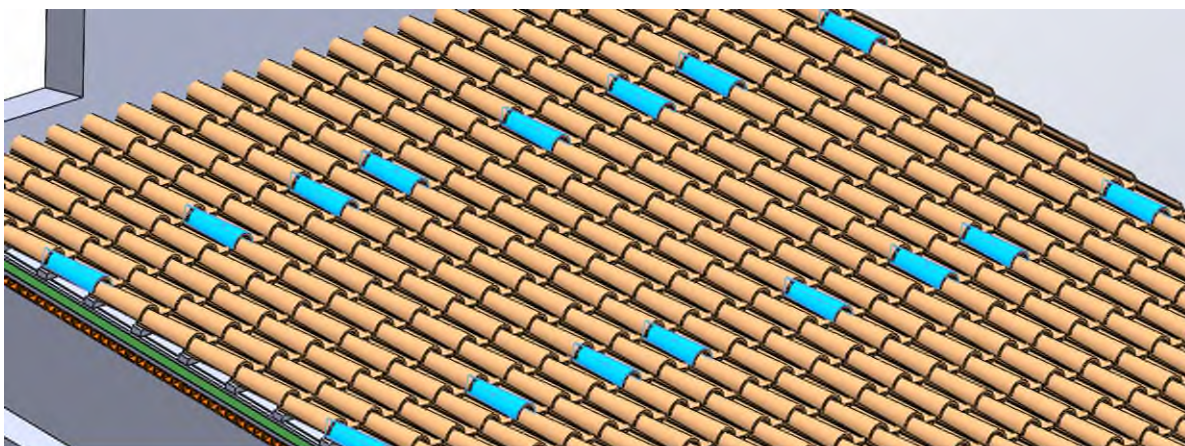


STEP 3.- Assembly of the triangles

The triangles come pre-assembled, to finish their assembly it is necessary to assemble the lower profiles with the components they incorporate.


1. The triangle comes pre-assembled, with the rear lower profile separated and its components in a bag.




2. Unfolds before attaching the rear underprofile

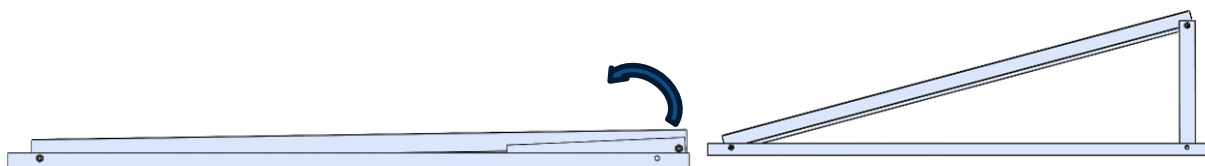

3. Attach the rear bottom profile with the components found in the bag.

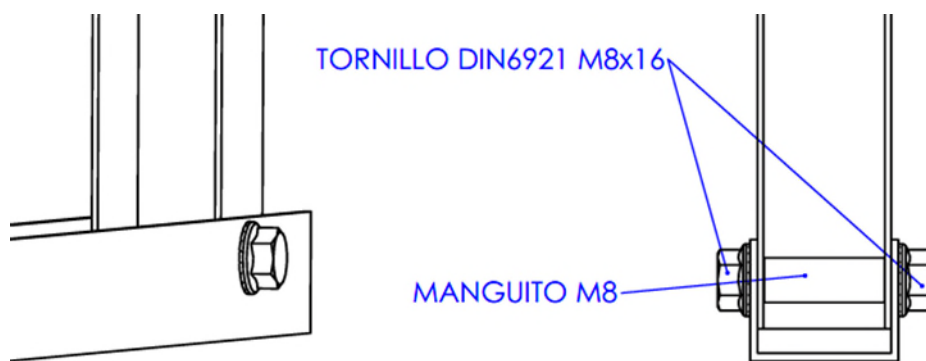
JOINING THE LOWER PROFILE AND THE SUPPORT

4. To correctly fix its position, a tightening torque of 15 Nm must be applied.

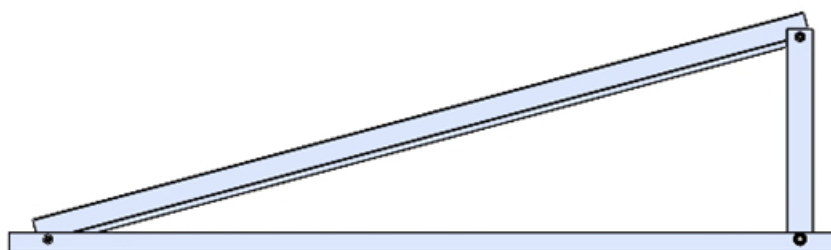

STEP 4.- Installation of the fasteners

Install the fasteners following the installation instructions contained in their corresponding technical data sheets

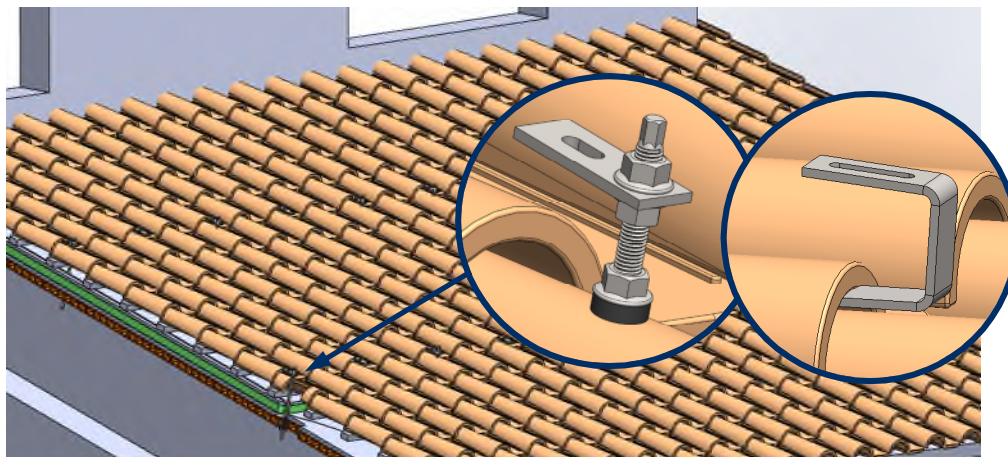


						
PMO Placa de montaje	KFS-RV Kit varilla roscada fij. química	KFS-MA Kit tornillo doble rosca madera	GS-TC Gancho salvateja teja curva	GS-TU Gancho salvateja teja univ.	GS-TP Gancho salvateja teja plana	GS-PI Gancho salvateja pizarra
Ficha técnica	Ficha técnica	Ficha técnica	Ficha técnica	Ficha técnica	Ficha técnica	Ficha técnica


STEP 5.- Installing the triangles

For tile installation, it can be fixed in two ways, through the tile or with a tile saver

- **Option 1.** Attach the lower profile of the triangle to the PMO plate using DIN 603 screws (M8x20) and DIN 6923 M8 nuts. Apply a maximum tightening torque of 15 Nm with a SW-13 hex key.

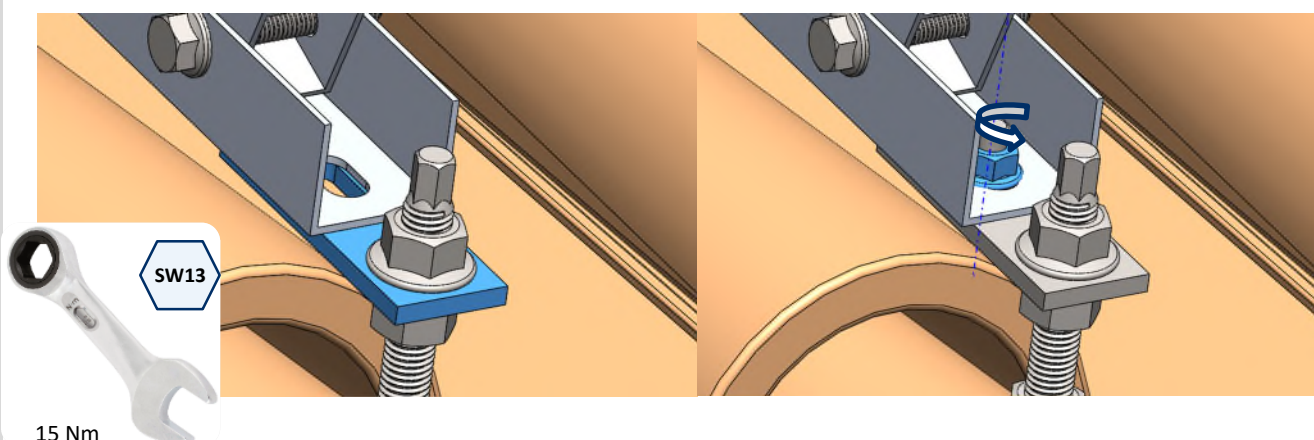

- **Option 2.** Attach the lower profile of the triangle to the roof tile saver using DIN 603 screws (M8x20) and DIN 6923 M8 nuts. Apply a maximum torque of 15 Nm with a SW-13 hex wrench

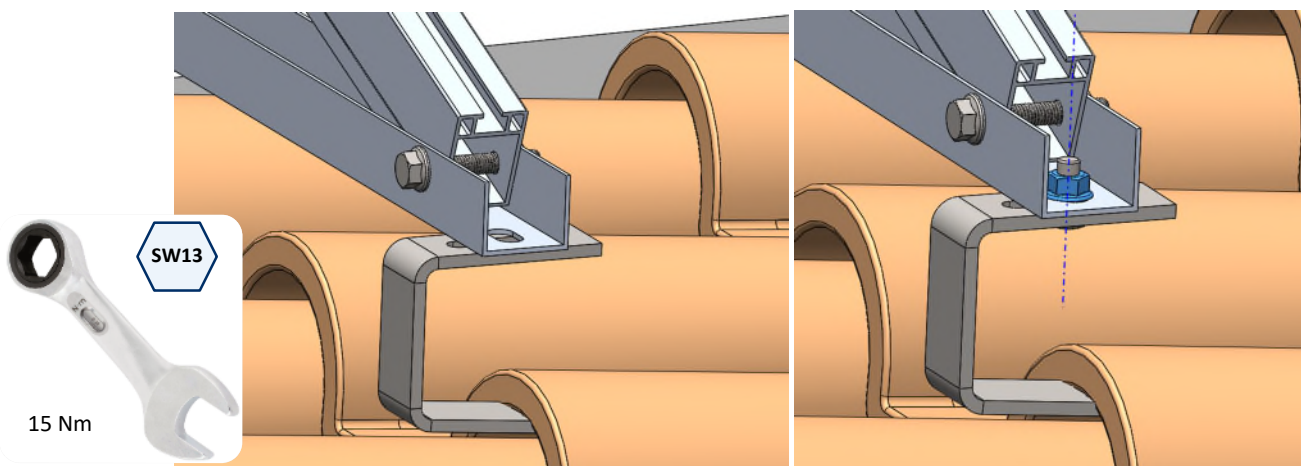

* The following steps explain the assembly regardless of the selected roof fixing, so it will only be shown with a fixation example.

STEP 6.- Pre-installation of staples on the profiles



To mount the clip on the profiles, the following steps need to be performed:

<p>1. Place the clip on the profiles with the lower head parallel to the guide.</p>	<p>2. To fix the clamp to the profile it is necessary to turn the lower head to the position perpendicular to the profile using the screw, press the screw head and turn it. The nut has a serrated profile to secure the fixation.</p>	<p>3. Insert the corresponding elements, two plates in the case of an intermediate staple or plate and gauge if it is a final staple.</p>	<p>4. To fix the inserted elements, it is necessary to turn the screw until they come into contact with the profile. Check that the lower head is still perpendicular to the profile.</p>

Staple type depending on its position:

A. Final Staple

- Prepare 4 quick-fix staples KFRSC3050 to be mounted at the ends of each row of panels. Each of these staples is fitted with a GM-A gauge, mounted as shown in the figure:

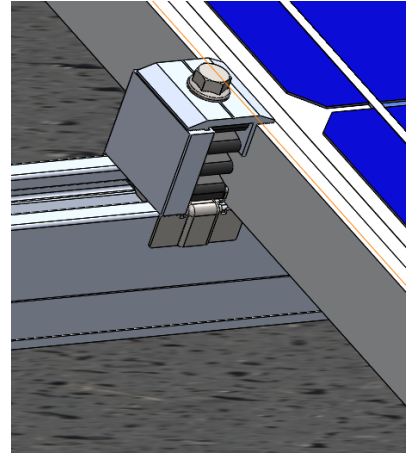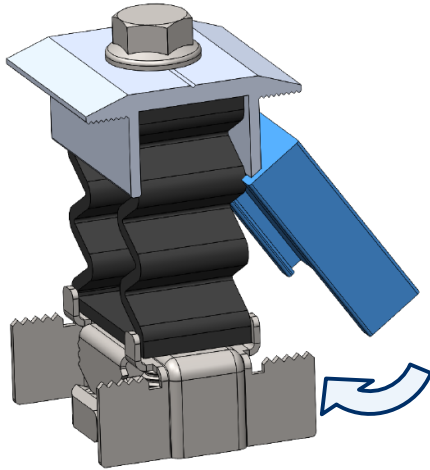

The size of gauges chosen must be equal to the frame height of the solar panels to be installed.